



# NARCOTICS CONTROL SAFES



## HIGH-SECURITY, MADE EASY

Secure your drugs with FBI-certified fingerprint authentication.



## FULLY-CUSTOMIZABLE ACCESS

Customizable access rules helps you stop drug diversion.



## FULLY-FUNCTIONAL, ONLINE OR OFFLINE

Full functionality and audit logs, even outside of cellular range.



## BATTERY BACKUP

Keeping critical medications secure and accessible at all times.



## EMERGENCY REMOTE OPEN

Fully-controlled emergency remote access, with full audit logging, even if the safe is off-line.



**MedixSafe** has been serving EMS, Fire and Healthcare for over 17 years. Our award-winning platform sets the standard for drug security, provides the highest data-security in the industry, and protects your staff and patients with 24x7 regulatory compliance.

- ✓ Our **vehicle safes** are designed for easy installation into ambulances and fire apparatus.
- ✓ Our **station and clinic safes** provide unmatched drug diversion protection across your organization.
- ✓ Our **narcotics tracking** provides fully-automated tracking and reporting, every time controlled substances are accessed or moved.

## PRODUCT SPECIFICATIONS: VEHICLE, EMS STATION AND CLINIC SAFES

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Access Options</b>      | Badge / Building Access Card, PIN, Fingerprint, Mobile Phone (iOS, Android), Apple Watch, 2-Person Authentication                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Capacity</b>            | 7,500 users + 30,000 offline log events                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Network Options</b>     | Ethernet (10/100Mbps)<br>Wifi (802.11B/G/N, 2.4GHz), WPA/WPA2, dual-hotspot support<br>Full compatibility with in-vehicle mobile / cellular hotspots                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Interior Dimensions</b> | <b>Vehicle Compact:</b> 5.5" W x 6.5" H x 10" D<br><b>Vehicle Standard:</b> 8" W x 9 3/4" H x 11" D<br><b>Station Compact:</b> 12" W x 13 3/4" H x 15" D<br><b>Station Standard:</b> 17 1/2" W x 24" H x 9 1/2" D<br><b>Station Max:</b> 29 1/2" W x 48" H x 26 1/2" D (each compartment is 19 1/2" W)<br><b>Clinic Compact:</b> 9 3/4" W x 9 3/4" H x 3 3/4" D<br><b>Clinic Standard:</b> 17 1/2" W x 24" H x 9 1/2" D<br><br><b>INSTALLATION NOTE:</b> Non-biometric control panels extend 1 1/2" from the front of the safe, and biometric control panels extend 2 3/4". A minimum clearance of 1" is required behind the safe. |
| <b>Power Options</b>       | 120V / 240V AC (building), 12V DC (vehicle)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Temperature Rating</b>  | Operating Temperature: -5° F (-20° C) to 125° F (50° C)<br>Storage Temperature: -25° F (-30° C) to 180° F (80° C)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Security</b>            | Data in Transit: TLS 1.2 encryption + bi-directional X509 authentication<br>Data at Rest: AES-256 encryption + RSA distribution of unique per-customer keys                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Redundancy</b>          | 9 layers of hardware and software redundancy, including:<br>Remote Open, Battery Backup, Redundant Firmware + Configuration Memory                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Warranty</b>            | Active customers receive a full warranty on all hardware and software components                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |



## EMS STATION SAFES

✓ MedixSafe Vehicle and Station Safes feature a durable **polyester tough-coat surface**.



**STATION STANDARD**



**STATION MAX**



## CLINIC SAFES

✓ MedixSafe Clinic Safes feature a proprietary interior and exterior **antimicrobial coating**.



**CLINIC COMPACT**



**CLINIC STANDARD**

**Fully-automated inventory, with  
no change to your Medics' workflow.**

1



Open the Safe

2



Remove the Medication

3




Close the Door

**MedixSafe delivers real-time, vial-level visibility of controlled substances — automatically, with no change to your Medics' workflow.** Simply open the safe, remove the medication, close the door.

## TECHNOLOGY YOUR MEDICS WILL LOVE

- ✓ Our **electronic witness** automatically records every medication movement, every time the door closes – in your vehicles and in your stations.
- ✓ Real-time visibility when devices are **online**. Seamless recording when devices are **offline**.
- ✓ Unique serial numbers on every vial ensures accountability and **accurate reporting**.
- ✓ Our next-generation clear labels provide full visibility, and our advanced antennas work with most departments' existing carriers. **No clumsy containers** to interfere with inspection and drug administration.

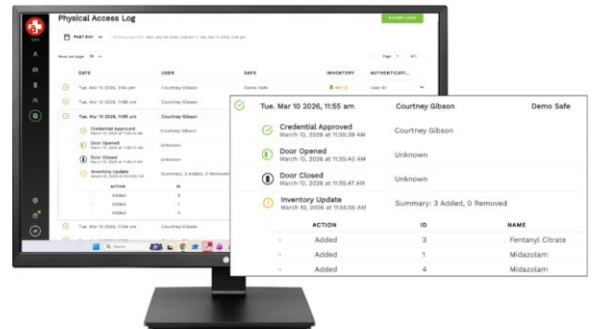

**SCAN HERE FOR MORE INFORMATION,  
MANUALS AND INSTALLATION GUIDES**



## THE MEDIXSAFE COMMITMENT

MedixSafe has been serving EMS, Fire and Healthcare services for over 17 years, setting the standard for narcotic security. We design, build and test our own cabinets, our own electronics, and our own software, to provide you with truly unrivaled protection and DEA compliance.

We are the only provider who monitors your safes 24x7 and performs preventive maintenance remotely, in real time, when issues arise. Our team will ensure you have the equipment you need – and will have your back, no matter what.



201-12220 ITEC HAUL DRIVE  
FORT MYERS, FL 33913

563-149 EAST LIBERTY STREET  
TORONTO, ON M6K 3K4

**MEDIXSAFE.COM**  
INFO@MEDIXSAFE.COM  
1-855-633-4972